

PDP67 F 4 code



Decentralised periphery

This document is a translation of the original document.

All rights to this documentation are reserved by Pilz GmbH & Co. KG. Copies may be made for internal purposes.

Suggestions and comments for improving this documentation will be gratefully received.

Pilz®, PIT®, PMI®, PNOZ®, Primo®, PSEN®, PSS®, PVIS®, SafetyBUS p®, SafetyEYE®, SafetyNET p®, the spirit of safety® are registered and protected trademarks of Pilz GmbH & Co. KG in some countries.



SD means Secure Digital.

Contents	Page
Chapter 1 Introduction	
1.1 Validity of documentation	1-1
1.1.1 Retaining the documentation	1-1
1.2 Overview of documentation	1-2
1.3 Definition of symbols	1-3
Chapter 2 Overview	
2.1 Unit structure	2-1
2.1.1 Range	2-1
2.1.2 Unit features	2-1
2.2 Front view	2-2
Chapter 3 Safety	
3.1 Intended use	3-1
3.2 Safety regulations	3-2
3.2.1 Use of qualified personnel	3-2
3.2.2 Warranty and liability	3-2
3.2.3 Disposal	3-2
Chapter 4 Function description	
4.1 Operation	4-1
4.1.1 Internal wiring diagram	4-1
4.1.2 Diagnostics	4-1
Chapter 5 Installation	
5.1 General installation guidelines	5-1
5.1.1 Dimensions	5-1
Chapter 6 Wiring	
6.1 General wiring guidelines	6-1
6.2 Assignment of female connectors	6-2
6.3 Preparing for operation	6-4
6.3.1 Connection	6-4
6.3.1.1 Independent circuit	6-4
6.3.1.2 Series connection of modules	6-6
Chapter 7 Operation	
7.1 Messages	7-1
7.1.1 Display elements for device diagnostics	7-1
Chapter 8 Technical details	
8.1 Technical details	8-1
8.2 Order reference	8-3



1.1 Validity of documentation

This documentation is valid for the products **PDP67 F 4 code**, **PDP67 F 4 code VA**. It is valid until new documentation is published.

This operating manual explains the function and operation, describes the installation and provides guidelines on how to connect the product.

1.1.1 Retaining the documentation

This documentation is intended for instruction and should be retained for future reference.

1.2 Overview of documentation

1 Introduction

The introduction is designed to familiarise you with the contents, structure and specific order of this manual.

2 Overview

This chapter provides information on the product's most important features.

3 Safety

This chapter must be read as it contains important information on intended use.

4 Function Description

This chapter describes the product's mode of operation.

5 Installation

This chapter explains how to install the product.

6 Commissioning

This chapter describes the product's commissioning and wiring.

7 Operation

This chapter describes how to operate the product and gives tips in the case of a fault.

8 Technical Details

This chapter contains the product's technical details and order reference.

1.3 Definition of symbols

Information that is particularly important is identified as follows:



DANGER!

This warning must be heeded! It warns of a hazardous situation that poses an immediate threat of serious injury and death and indicates preventive measures that can be taken.



WARNING!

This warning must be heeded! It warns of a hazardous situation that could lead to serious injury and death and indicates preventive measures that can be taken.



CAUTION!

This refers to a hazard that can lead to a less serious or minor injury plus material damage, and also provides information on preventive measures that can be taken.



NOTICE

This describes a situation in which the unit(s) could be damaged and also provides information on preventive measures that can be taken. It also highlights areas within the text that are of particular importance.



INFORMATION

This gives advice on applications and provides information on special features.

1 Introduction

2.1 Unit structure

2.1.1 Range

- ▶ Module **PDP67 F 4 code/PDP67 F 4 code VA**
- ▶ 1 adapter **PDP67 Connector cs/PDP67 Connector cs VA** for connecting the power supply for the module and sensors
- ▶ 5 labels
- ▶ 4 blind plugs for sealing unused female connectors

2.1.2 Unit features


Application of the products **PDP67 F 4 code, PDP67 F 4 code VA**:

Decentralised passive distributor for use in rugged industrial environments up to protection type IP67 for connecting PSENcode, PSENslock and PSENini sensors to a Pilz control system.

The product has the following features:

- ▶ Protection type IP67
- ▶ M12 female connectors
- ▶ A maximum of 4 sensors can be connected to each module
- ▶ Female connectors for series connection
- ▶ LED indicator for:
 - Supply voltage
 - Status of sensors

2.2 Front view

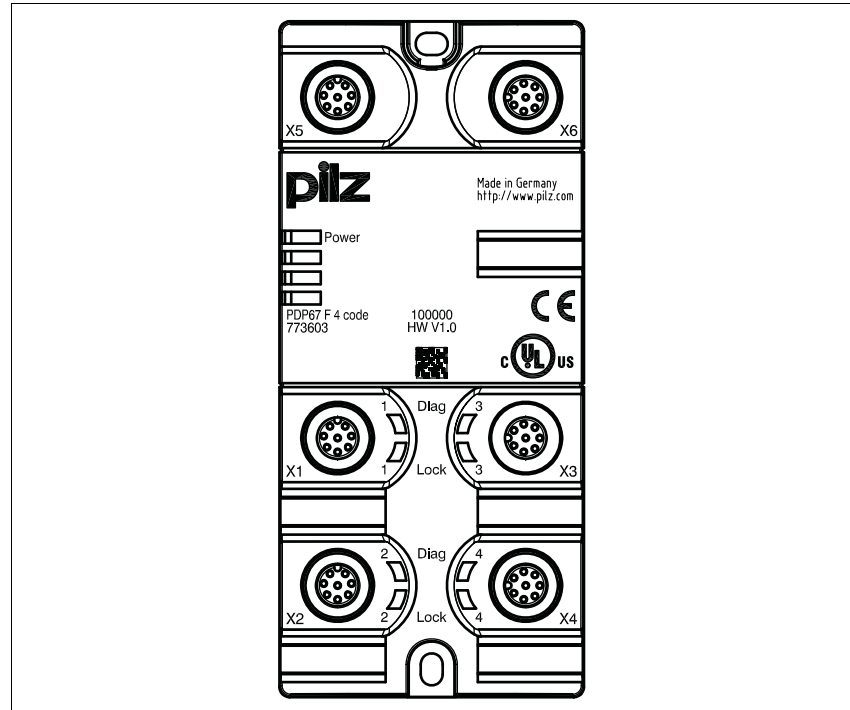

Key:

- ▶ X1 ... X4:
Female connectors for connecting the sensors
- ▶ X5:
Female connectors for connecting to the evaluation device (for connecting the sensors to X1 ... X4)
- ▶ X6:
Female connectors for connecting signal outputs (Diag) and inputs for control commands for magnetic guard locking (Lock)
- ▶ LEDs:
 - Power
 - Diag
 - Lock

3.1 Intended use

Decentralised passive distributor for use in rugged industrial environments up to protection type IP67 for connecting PSENcode, PSENslock and PSENIini sensors to a Pilz control system.

Intended use includes making the electrical installation EMC-compliant. The product is designed for use in an industrial environment. It is not suitable for use in a domestic environment, as this can lead to interference.

The following is deemed improper use in particular:

- ▶ Any component, technical or electrical modification to the product
- ▶ Use of the product outside the areas described in this manual
- ▶ Use of the product outside the technical details (see chapter entitled “Technical Details”)

3.2 Safety regulations

3.2.1 Use of qualified personnel

The products may only be assembled, installed, programmed, commissioned, operated, maintained and decommissioned by competent persons.

A competent person is someone who, because of their training, experience and current professional activity, has the specialist knowledge required to test, assess and operate the work equipment, devices, systems, plant and machinery in accordance with the general standards and guidelines for safety technology.

It is the company's responsibility only to employ personnel who:

- ▶ Are familiar with the basic regulations concerning health and safety / accident prevention
- ▶ Have read and understood the safety guidelines given in this description
- ▶ Have a good knowledge of the generic and specialist standards applicable to the specific application.

3.2.2 Warranty and liability

All claims to warranty and liability will be rendered invalid if:

- ▶ The product was used contrary to the purpose for which it is intended
- ▶ Damage can be attributed to not having followed the guidelines in the manual
- ▶ Operating personnel are not suitably qualified
- ▶ Any type of modification has been made (e.g. exchanging components on the PCB boards, soldering work etc.).


3.2.3 Disposal

- ▶ In safety-related applications, please comply with the mission time t_M in the safety-related characteristic data.
- ▶ When decommissioning, please comply with local regulations regarding the disposal of electronic devices (e.g. Electrical and Electronic Equipment Act).

4.1 Operation

Using the module **PDP67 F 4 code/PDP67 F 4 code VA**, up to four PSEncode, PSEnlock and/or PSEnini sensors can be connected in series and connected to an evaluation device.

4.1.1 Internal wiring diagram

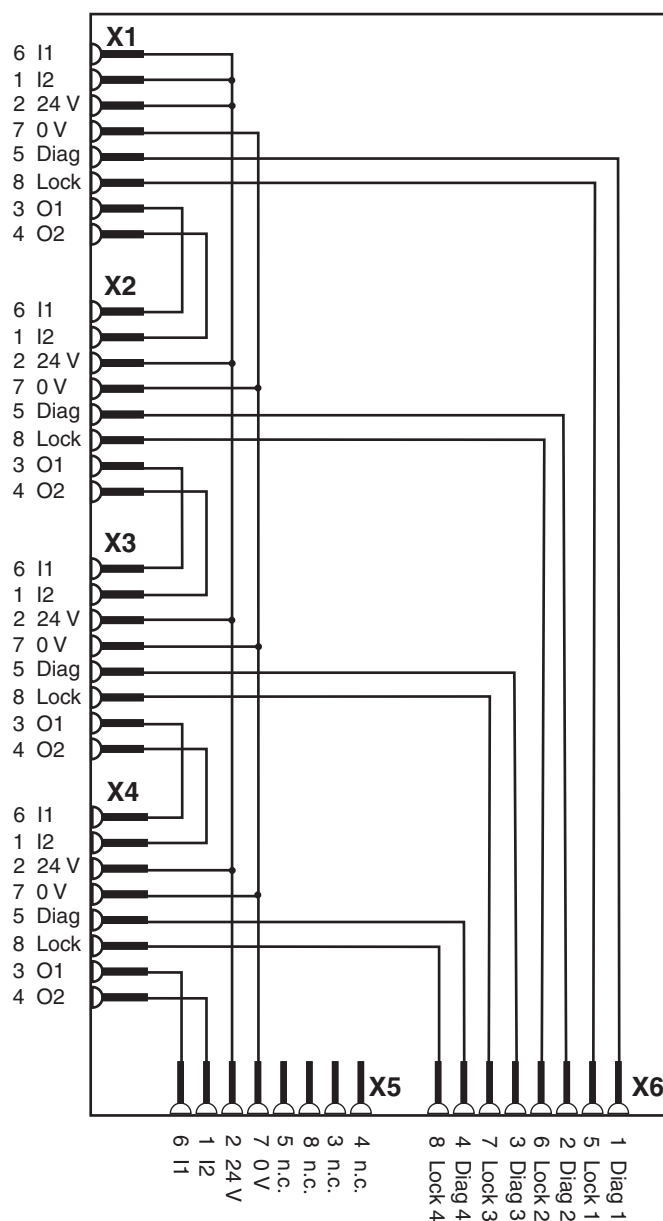

4 Function description

4.1 Operation

4.1.2 Diagnostics

The LEDs indicate the statuses of the signal outputs (Diag) and the inputs for control commands for magnetic guard locking (Lock).

5.1 General installation guidelines


The product must be fastened to a flat mounting surface, so that there is no strain on the housing when the module is screwed down. The mounting distances will depend on which plug-in connectors are used and on the bending radius of the cables.

Unused connectors should be sealed using blind plugs.

To install the system, proceed as follows:

- ▶ Fit 2 x M4 internal threads on the mounting surface.
- ▶ Use two fixing screws to attach the product to the mounting plate.

5.1.1 Dimensions

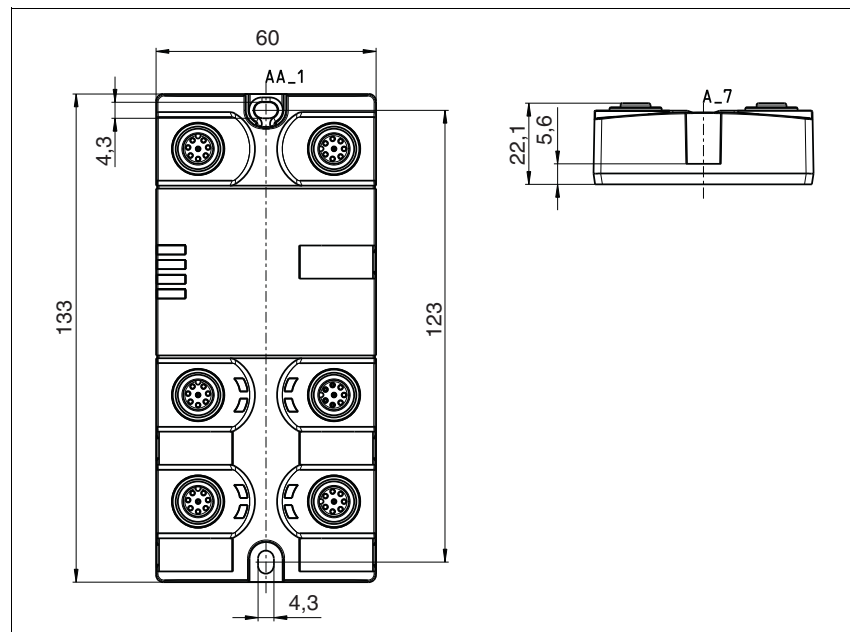

6.1 General wiring guidelines

Please note:


- ▶ Information given in the “Technical details” must be followed.
- ▶ Where safety-related applications are concerned, it is essential that short circuits and open circuits are unable to cause a hazardous condition within a plant. The way in which this is done will depend on the degree of hazard from the plant, the switching frequency of the sensors and the level of safety of the sensors and actuators.
- ▶ You can use prefabricated sensor cables from Pilz for connecting the sensors.




CAUTION!


In order to guarantee protection type IP67, unused plug-in connectors should be sealed using the blind plugs supplied.

6.2 Assignment of female connectors

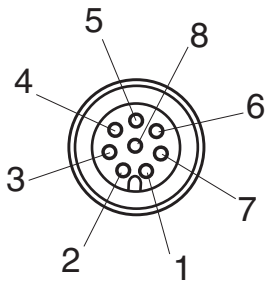Inputs/outputs X1 to X4	Layout	
8-pin M12 female connectors for connecting the sensors	1: input I2 (S21) 2: 24 V DC (A1) 3: Output O1 (12) 4: Output O2 (22) 5: Signal output (Y32) 6. Input I1 (S11) 7. 0 V (A2) 8. input for control command for magnetic guard locking (S31)	

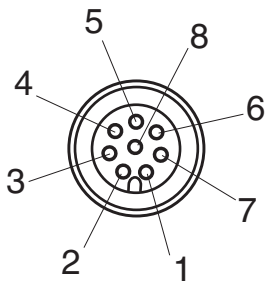Inputs/outputs X5	Layout	
8-pin M12 female connector for connecting to the safety inputs of an evaluation device	1: Input I2 2: 24 VDC 3: n.c. 4: n.c. 5: n.c. 6. Input I1 7. 0 V 8. n.c.	

6.2 Assignment of female connectors

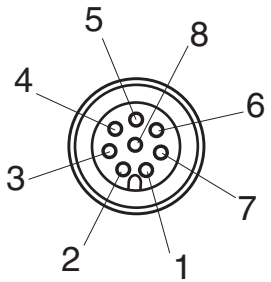Inputs/outputs X6	Layout	
8-pin M12 female connector for connecting to the standard inputs and outputs of an evaluation device	1: Signal output X1 2: Signal output X2 3: Signal output X3 4: Signal output X4 5: "Lock_Unlock" X1 (input for control command for magnetic guard locking) 6: "Lock_Unlock" X2 (input for control command for magnetic guard locking) 7: "Lock_Unlock" X3 (input for control command for magnetic guard locking) 8: "Lock_Unlock" X4 (input for control command for magnetic guard locking)	

6.3 Preparing for operation

6.3.1 Connection

Please note:

- ▶ A maximum of 4 sensors per module can be connected to female connectors X1 ... X4. Note the current load capacity of the modules (see current load capacity for UB)
- ▶ The evaluation device is always connected to the last non-assigned female connector X2 ... X5.
- ▶ The adapter **PDP67 Connector cs/PDP67 Connector cs VA** must be used for connecting the evaluation device and for connecting the modules in series. The adapter requires the use of a female connector for connecting the supply voltage. This prevents the risk of a short circuit from contact with the contacts of a male connector.
- ▶ The signal outputs (Diag) of the connected sensors are connected to pins 1 to 4 of the X6 female connector.
- ▶ The control commands for magnetic guard locking ("Lock_Unlock") for PSENSlock are connected to pins 5 to 8 of the X6 female connector.
- ▶ The sensors must always be connected to the module in consecutive order.

Example:

- Correct: Sensor to female connector X1, X2, X3
- Wrong: Sensor to female connector X1, X2, X4



CAUTION!

When several units are connected in series, the delay-on de-energisation time increases in direct proportion to the number of interconnected safety switches.


Please refer to the chapter entitled "Technical details" in the operating manual for the sensors used for the delay-on de-energisation times.

6.3 Preparing for operation

6.3.1.1 Independent circuit

6.3.1.2 Examples of independent circuit


- Connection example 1: Connection of four sensors (X1 ... X4)

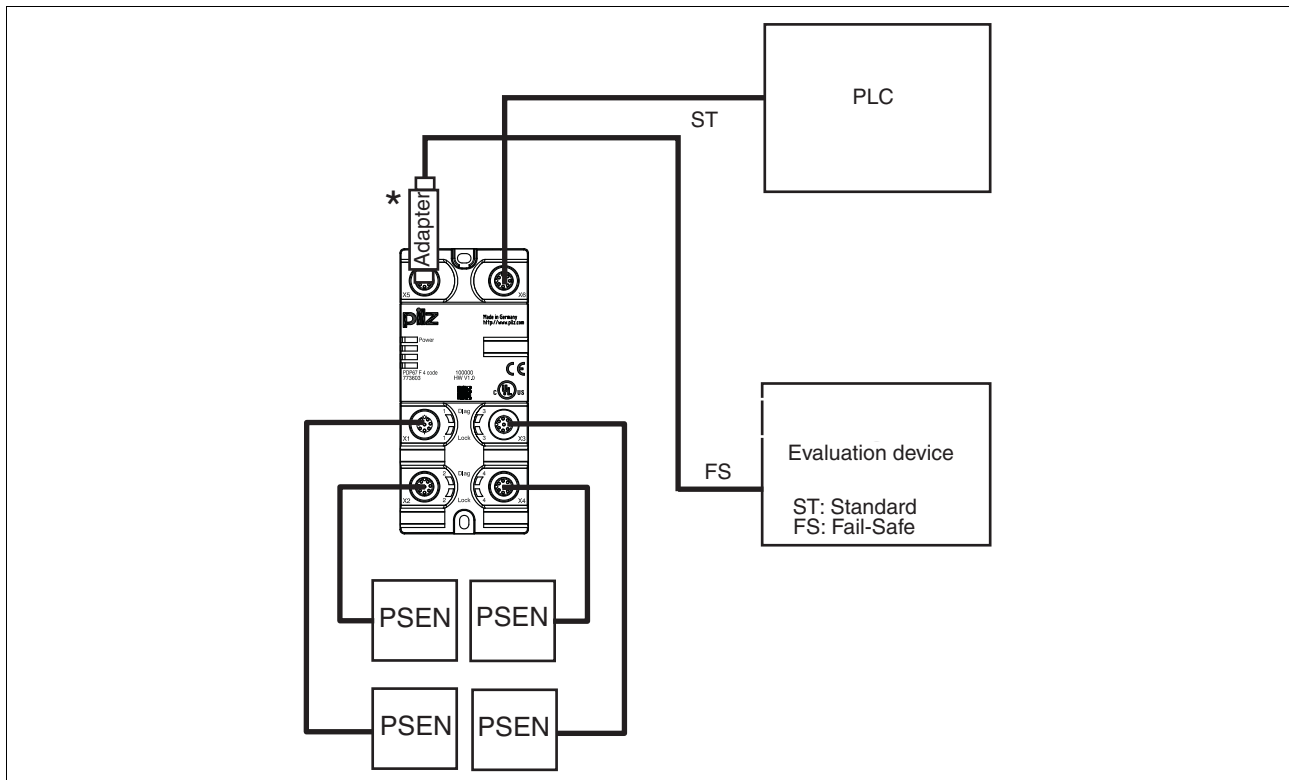

*Adapter: **PDP67 Connector cs/PDP67 Connector cs VA**

6.3 Preparing for operation

Connection example 2: Connection of three sensors (X1 ... X3)

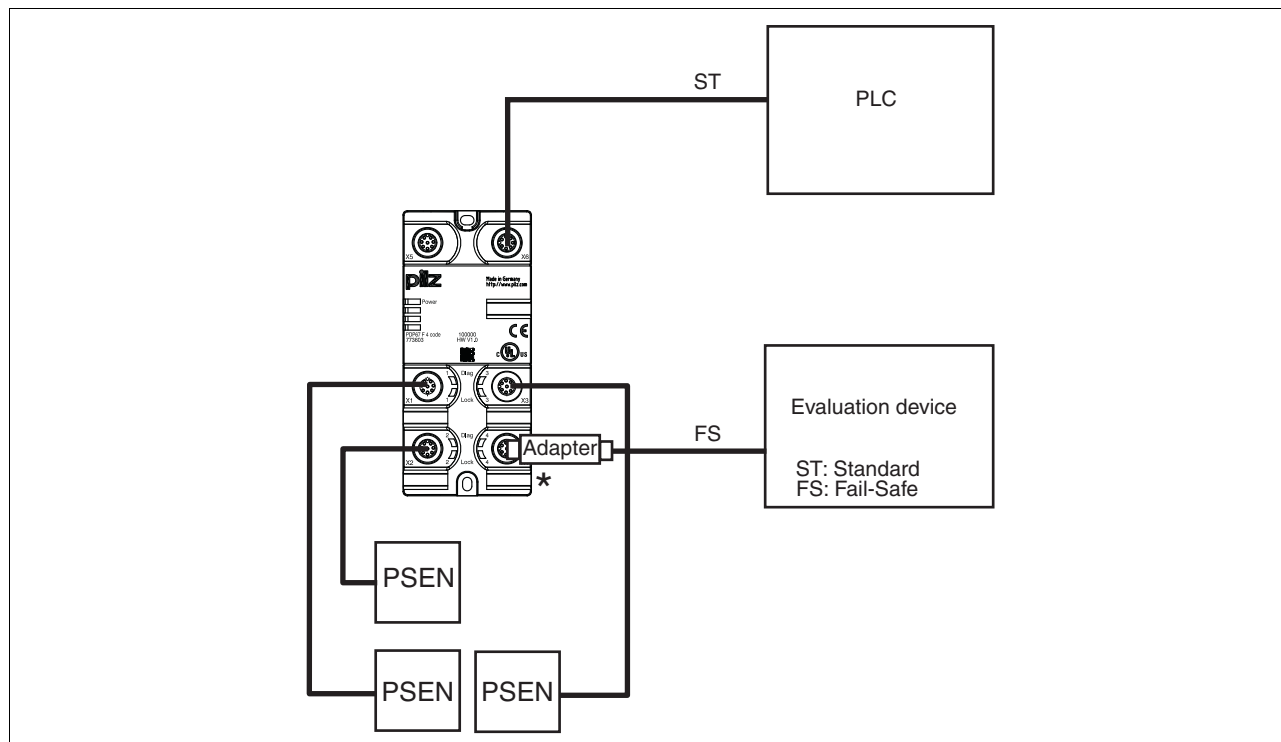

*Adapter: **PDP67 Connector cs/PDP67 Connector cs VA**

6.3 Preparing for operation


6.3.1.3 Series connection of modules

Please note:

- ▶ The series connection of the modules is always created with the last free female connector X2 ... X5 and the X1 female connector of the next module. The adapter **PDP67 Connector cs/PDP67 Connector cs VA** must be used for connecting the modules in series.
- ▶ The voltage at the last module must not fall below the permitted supply voltage level. Please refer to the operating manual for the sensors used for the permissible values for the supply voltage (see "Voltage tolerance" in the chapter entitled "Technical details"). An example of how the voltage drop is calculated can be found in the chapter entitled "Voltage drop".

6.3.1.4 Examples of series connection


Connection example 1: Series connection for connecting four sensors (X1 ... X4) to the first module

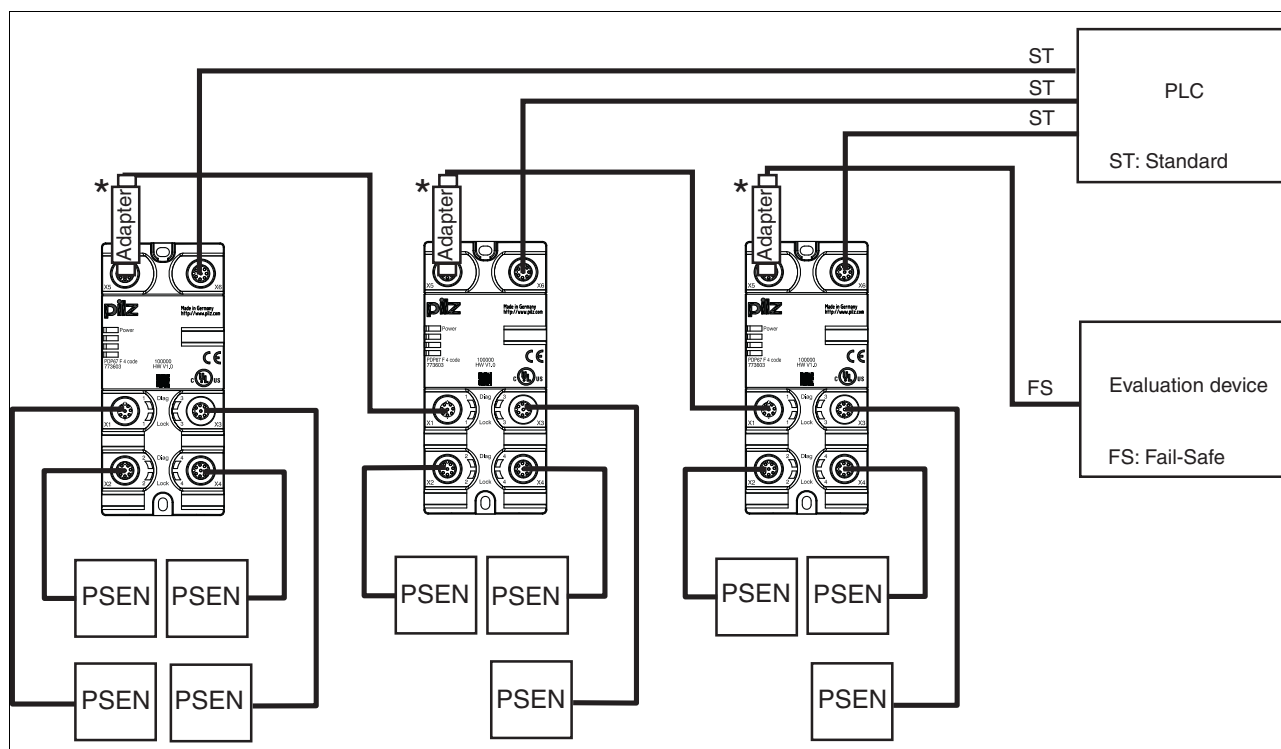

*Adapter: **PDP67 Connector cs/PDP67 Connector cs VA**

6.3 Preparing for operation

- Connection example 2: Series connection for connecting three sensors (X1 ... X3) to the first module

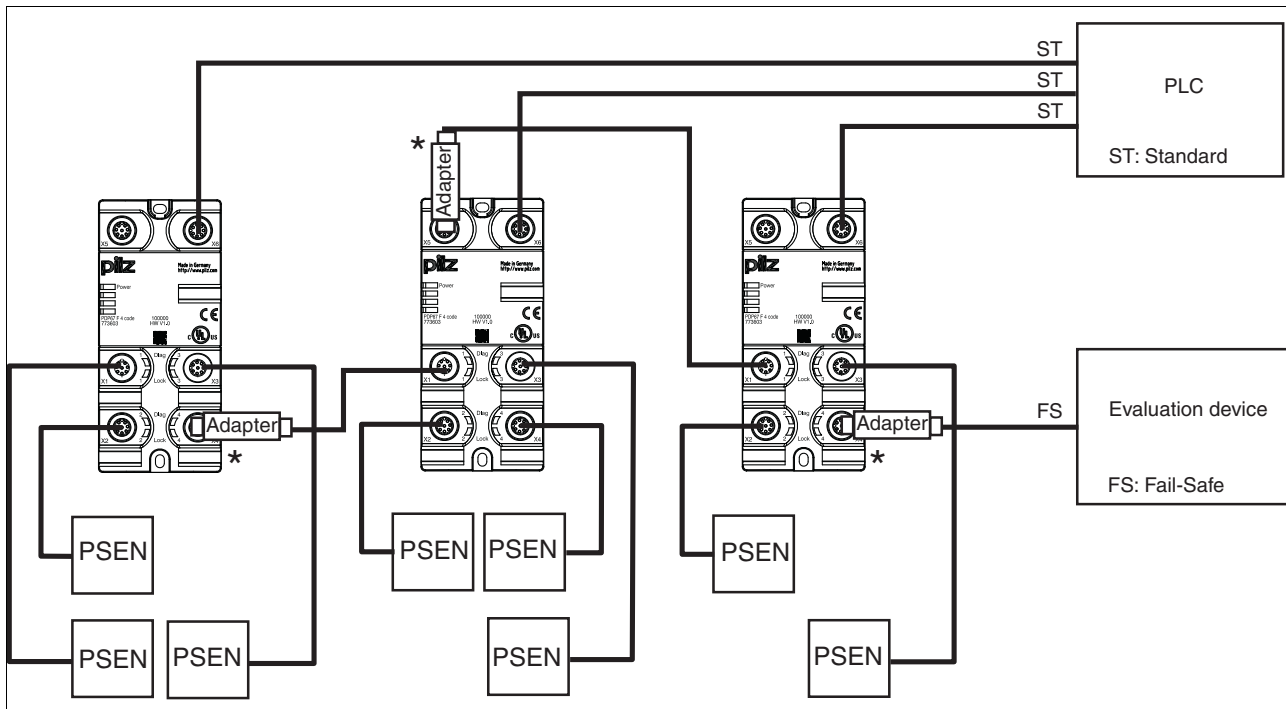

*Adapter: **PDP67 Connector cs/PDP67 Connector csVA**

6.3.1.5 Voltage drop

The max. cable length depends on the voltage drop in the supply voltage cables. The level of voltage drop is determined by the:


- Cable resistance on the supply voltage cables
- Operating current of the modules
- Load on the modules

To increase the max. cable length, the input voltage can be permanently increased by the voltage tolerance (see Technical Details).

6.3 Preparing for operation

6.3.1.6 Example of calculation

- A 0.25 mm² sensor cable is used.
Voltage drop per 10 m and per 100 mA: 0.15 V

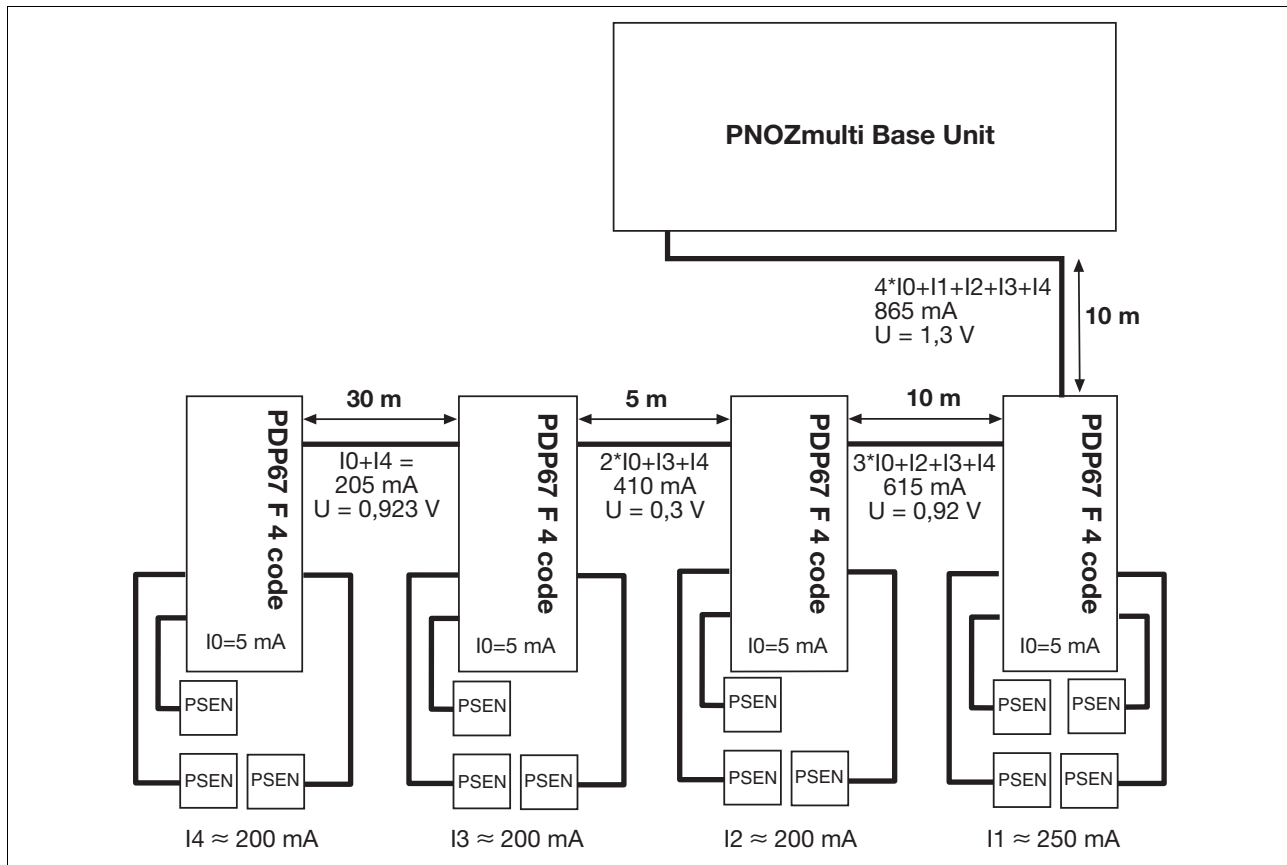

6.3.1.7 Standard values for a range of cable types

Guidelines for calculating the voltage drop on various cable types

Cable type	Voltage drop per 10 m and per 100 mA
PSS SB BUSCABLE LC	0.1 V
Sensor cable 0.25 mm ²	0.15 V
Sensor cable 0.34 mm ²	0.11 V
Sensor cable 0.5 mm ²	0.07 V

7.1 Messages

The module is ready for operation when the "Power" LED is lit continuously.

7.1.1 Display elements for device diagnostics

Legend:

	LED on
	LED flashes
	LED off

LED	LED status		Meaning
Power		green	The unit is ready for operation
			The unit is not ready for operation
Diag		green	The actuator is within the response range
			The actuator is not within the response range
Lock		green	Control command for magnetic guard locking available
			Control command for magnetic guard locking not available

8.1 Technical details

Technical details	
Electrical data	
Supply voltage U_B DC	24 V
Current load capacity at U_B	2.0 A
Environmental data	
EMC	EN 61000-4-2, EN 61000-4-3, EN 61000-4-4, EN 61000-4-5, EN 61000-4-6, EN 61000-6-2, EN 61000-6-4
Vibration to EN 60068-2-6	
Frequency	10 - 55 Hz
Amplitude	0.35 mm
Climatic suitability	EN 60068-2-14, EN 60068-2-1, EN 60068-2-2
Airgap creepage in accordance with EN 60664-1	
Pollution degree	2
Ambient temperature	-40 - 60 °C
Storage temperature	-40 - 70 °C
Shock stress	11 ms 16 ms
Climatic suitability in accordance with EN 60068-2-78	93 % r. h. at 40 °C
Condensation	temporary No. 773603
Mechanical data	
Protection type	
Housing	IP67
Terminals	IP67
Housing material	
Top	PBT
Connection type	M12 No. 773603 Stainless steel 1.4305 No. 773613
Dimensions	
Height	120.0 mm
Width	60.0 mm
Depth	20.0 mm
Weight	211 g

8.2 Order reference

Order reference

Type	Features	Order no.
PDP67 F 4 code	Decentralised passive junction	773 603
PDP67 F 4 code VA	Decentralised passive junction, V2A ring nut	773 613
PDP67 Connector cs	Adapter	773 610
PDP67 Connector cs VA	Adapter, V4A union screw	773 612
PSEN cable M12-8sf M12-8sm	2 m	540 340
PSEN cable M12-8sf M12-8sm	5 m	540 341
PSEN cable M12-8sf M12-8sm	10 m	540 342
PSEN cable M12-8sf M12-8sm	20 m	540 343
PSEN cable M12-8sf M12-8sm	30 m	540 344



Pilz GmbH & Co. KG
Felix-Wankel-Straße 2
73760 Ostfildern, Germany
Telephone: +49 711 3409-0
Telefax: +49 711 3409-133
E-Mail: pilz.gmbh@pilz.de
Internet: www.pilz.com

...
In many countries we are
represented by our subsidiaries
and sales partners.

Please refer to our homepage
for further details or contact our
headquarters.

► Technical support

+49 711 3409-444
support@pilz.com

pilz

InduracNET p[®], Pilz[®], PIT[®], PMCProtego[®], PMI[®], PNOZ[®], Primo[®], PSEN[®], PSS[®], PVS[®], SafetyBUS p[®], SafetyEYE[®], SafetyNET p[®], the spirit of safety[®] are registered and protected trademarks of Pilz GmbH & Co. KG in some countries. We would point out that product features may vary from the details stated in this document, depending on the status at the time of publication and the scope of the equipment. We accept no responsibility for the validity, accuracy and entirety of the text and graphics presented in this information. Please contact our Technical Support if you have any questions.